



MICRO DIAPHRAGM GAS PUMPS
NMP 830, NMP 850 and NMP 850.1.2


DATA SHEET E 005



NMP 830 KNE



NMP 850 KNDC

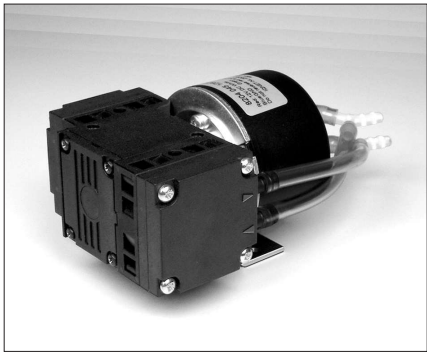

NMP 850.1.2 KNDC B

Concept

The Micro Diaphragm Gas Pumps from KNF are based on a simple principal - an elastic diaphragm, fixed on its edge, moves up and down its central point by means of an eccentric. In this way the gas is transferred using automatic valves.

The new range of KNF Micro Pumps is for the first time equipped with the stress-optimised diaphragm, resulting in a high pneumatic performance, a durable product and compact size. In addition special valves ensure the minimum resistance to flow.

Thanks to the KNF modular system, the parts used to tranfer the gases can be made from materials with varying degrees of compatability. The pumps can be driven by either AC motor, DC motors or brushless DC motor for long durability.

Features

- Uncontaminated flow
No contamination of the media due to oil-free operation
- Maintenance-free
- Compact size
- High pneumatic performance
- High level of gas tightness
thanks to the closed diaphragm surface and special sealing system
- Low aerodynamic loss
by means of a new valve system
- Long product life
- Ready for assembly
- Can operate in any installed position
- For the version with brushless motor the following also apply:
 - safe and reliable constant use
 - particularly long durability

Areas of use

KNF Micro Diaphragm Pumps are used frequently in the fields of analysis and medicine.

For instance as pumps for gas measurement, for example for sampling environmental conditions in the workplace, or for exhaust gas and smoke analysis or built into machines for measuring blood pressure.

The AC models are suited for use in machinery which is permanent or mains-operated. Micro Diaphragm Pumps for portable and stand-alone equipment require DC power supplies.

PERFORMANCE DATA					
Type	Delivery (l/min)	Vacuum (mbar absolute)	atm. Press.	Pressure (bar g)	Weight (g)
NMP 830 KNE	1.8	250		1	590
NMP 830 KNDC B	2.5	240		1.4	270
NMP 830 KNDC	3.1	250		1	195
NMP 850 KNDC B	4.2	230		1.5	360
NMP 850 KNDC	4.5	230		1.5	210
NMP 850.1.2 KNDC B	8.0	230		1.5	430

NMP 830 _ _ E

PERFORMANCE DATA

Type and Order No. ³⁾	Delivery at atm. pressure (l/min) ¹⁾	Max. operating pressure (bar g) ²⁾	Ultimate vacuum (mbar abs.)
NMP 830 KNE	1.8	1	250
NMP 830 KVE	1.8	1	250
NMP 830 KTE	1.6	1	310

1) Litre at STP 2) Continuous running

MOTOR DATA


Protection class	IP 00		
Voltage/Frequencies (V/Hz)	230/50		
Power P ₁ (W)	25		
Operating current (A)	0.3		

MODEL CODES AND MATERIALS


Type and Order No. ³⁾	Pump head	Diaphragm	Valves
NMP 830 KNE	Ryton ⁴⁾ (PPS)	EPDM	CR
NMP 830 KVE	Ryton ⁴⁾ (PPS)	FPM	FPM
Chemically resistant version			
NMP 830 KTE	Ryton ⁴⁾ (PPS)	PTFE coated	FFPM

3) See also „MODEL CODES FOR EASY ORDERING“


Dimensions ⁵⁾ (mm)

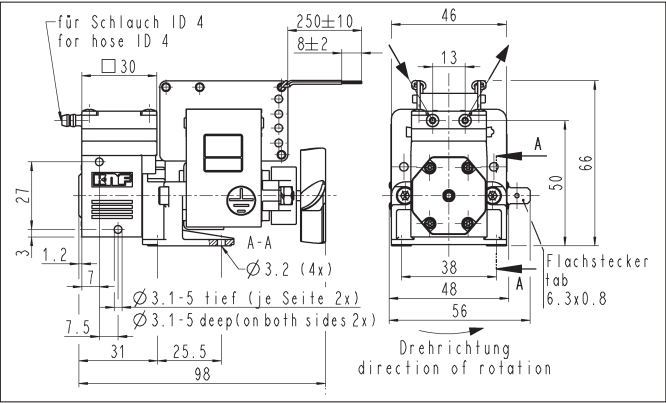

NMP 830 KNE/NMP 830 KVE

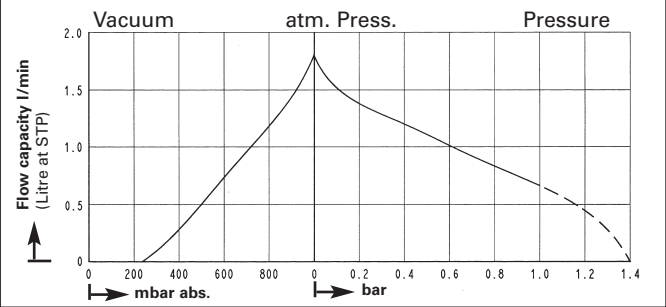

NMP 830 KTE

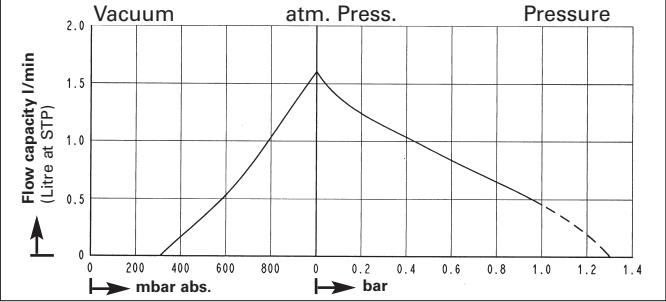

NMP 830 _ _ DC

PERFORMANCE DATA


Type and Order No. ³⁾	DC motor (V)	Delivery at atm. pressure (l/min) ¹⁾	Max. Operating pressure (bar g) ²⁾	Ultimate vacuum (mbar abs.)
NMP 830 KNDC	6	3.1	1	250
NMP 830 KVDC	6	2.7	1	250
NMP 830 KTDC	6	2.6	1	350
NMP 830 KNDC	12	3.1	1	250
NMP 830 KVDC	12	2.7	1	250
NMP 830 KTDC	12	2.6	1	350
NMP 830 KNDC	24	3.1	1	250
NMP 830 KVDC	24	2.7	1	250
NMP 830 KTDC	24	2.6	1	350

1) Litre at STP 2) Continuous running


MODEL CODES AND MATERIALS

Type and Order No. ³⁾	Pump head	Diaphragm	Valves
NMP 830 KNDC	Ryton ⁴⁾ (PPS)	EPDM	CR
NMP 830 KVDC	Ryton ⁴⁾ (PPS)	FPM	FPM
Chemically resistant version			
NMP 830 KTDC	Ryton ⁴⁾ (PPS)	PTFE coated	FFPM


4) Phillips Petroleum registered trade mark

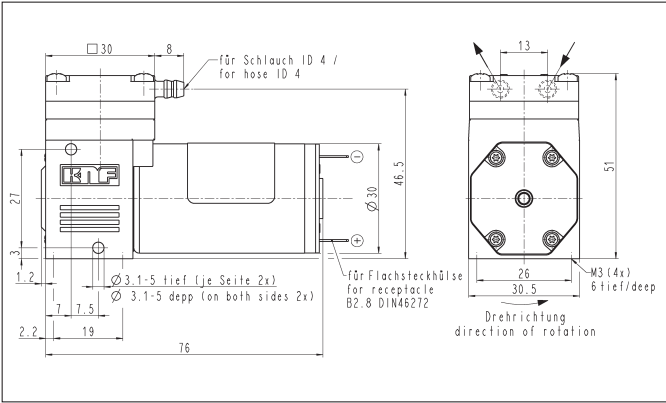


NMP 830 KNDC

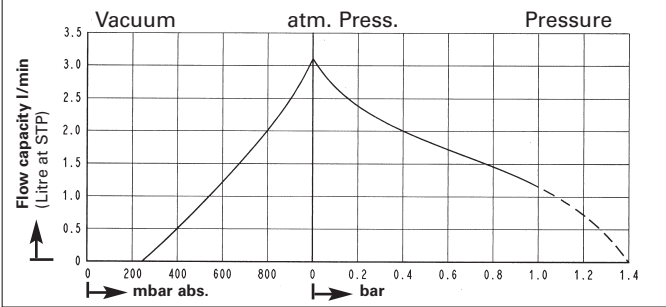

NMP 830 KVDC

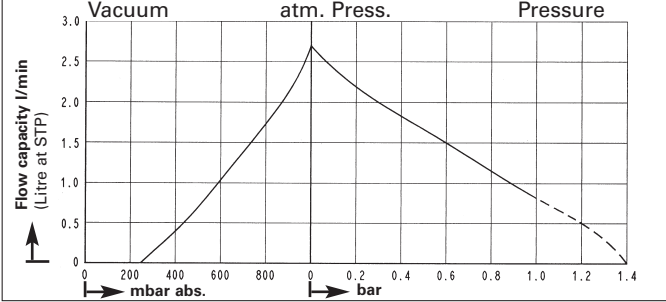

NMP 830 KTDC

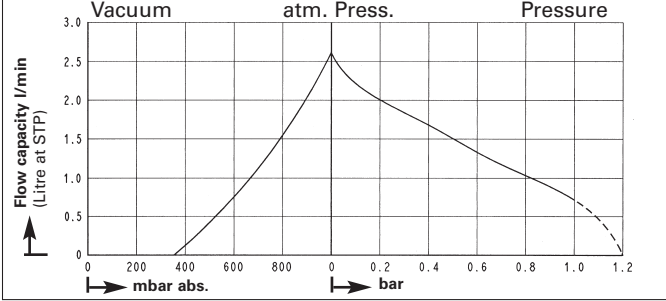

----- for short periods only

⁵⁾ All dimensional tolerances conform to DIN ISO 2768-1, Tolerance Class V

NMP 850 _ _ DC B

Version with brushless KNF dc motor

PERFORMANCE DATA

Type and Order No. ³⁾	Brushless dc motor (V)	Delivery at atm. pressure (l/min) ¹⁾	Max. operating pressure (bar g) ²⁾	Ultimate vacuum (mbar abs.)
NMP 850 KNDC B	12	4.2	1.5	230
NMP 850 KTDC B	12	3.5	1.5	300
NMP 850 KNDC B	24	4.2	1.5	230
NMP 850 KTDC B	24	3.5	1.5	300


1) Litre at STP 2) Continuous running

To comply with CE standards (EMC guidelines to EN 55014-1), attention must be paid to the specifications in the operating instruction.


MODEL CODES AND MATERIALS

Type and Order No. ³⁾	Pump head	Diaphragm	Valves
NMP 850 KNDC B	Ryton ⁴⁾ (PPS)	EPDM	EPDM
Chemically resistant version			
NMP 850 KTDC B	Ryton ⁴⁾ (PPS)	PTFE coated	FFPM


4) Phillips Petroleum registered trade mark

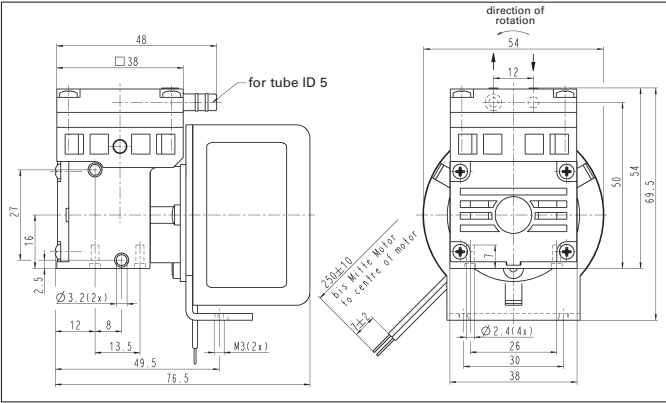

NMP 850 KNDC B

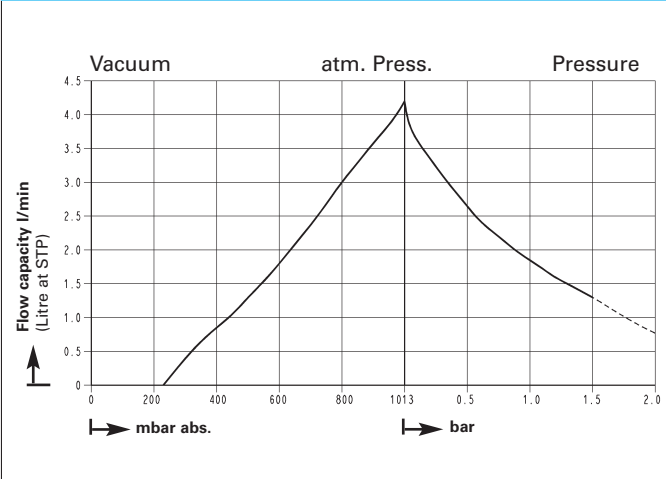

NMP 850 KTDC B

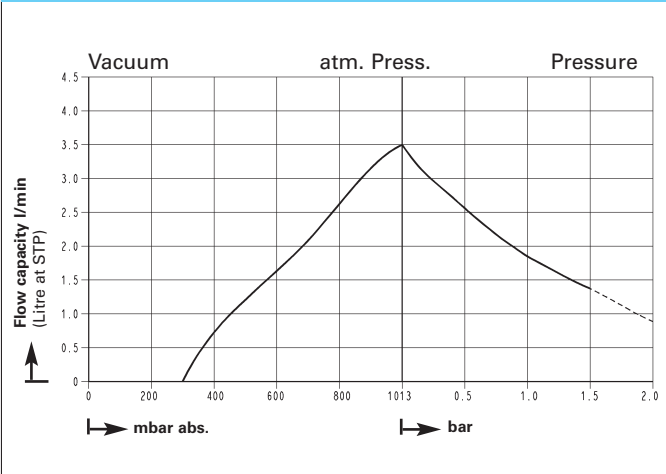

NMP 850.1.2 KNDC B

Version with brushless KNF dc motor

PERFORMANCE DATA

Type and Order No. ³⁾	Brushless dc motor (V)	Delivery at atm. pressure (l/min) ¹⁾	Max. operating pressure (bar g) ²⁾	Ultimate vacuum (mbar abs.)
NMP 850.1.2 KNDC B	12	8.0	1.5	230
NMP 850.1.2 KNDC B	24	8.0	1.5	230


1) Litre at STP 2) Continuous running

To comply with CE standards (EMC guidelines to EN 55014-1), attention must be paid to the specifications in the operating instruction.


MODEL CODES AND MATERIALS

Type and Order No. ³⁾	Pump head	Diaphragm	Valves
NMP 850.1.2 KNDC B	Ryton ⁴⁾ (PPS)	EPDM	EPDM

4) Phillips Petroleum registered trade mark

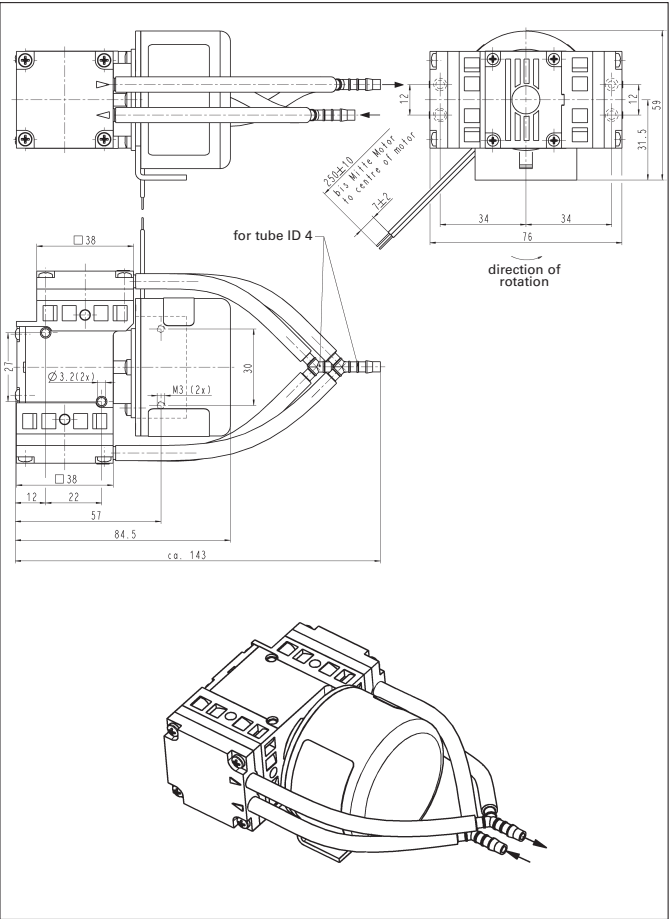

NMP 850.1.2 KNDC B

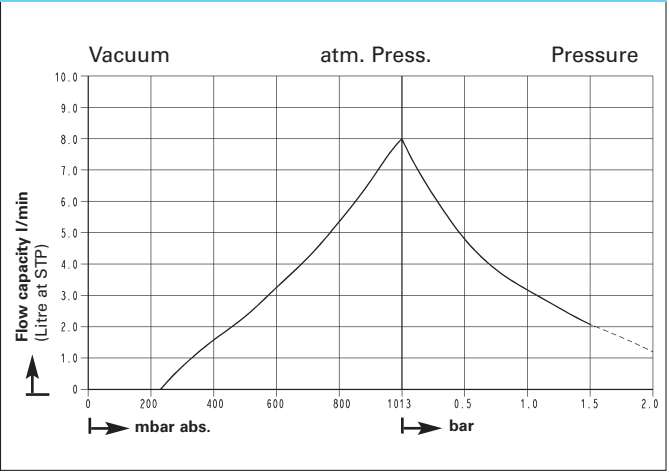




HINTS ON FUNCTION, INSTALLATION AND SERVICE

FUNCTION OF KNF DIAPHRAGM VACUUM PUMPS AND COMPRESSORS

An elastic diaphragm is moved up and down by an eccentric (see illustration). On the down-stroke it draws the air or gas being handled through the inlet valve. On the up-stroke the diaphragm forces the medium through the exhaust valve and out of the head. The compression chamber is hermetically separated from the drive mechanism by the diaphragm. The pumps transfer, evacuate and compress completely oil-free.

Diaphragm pump

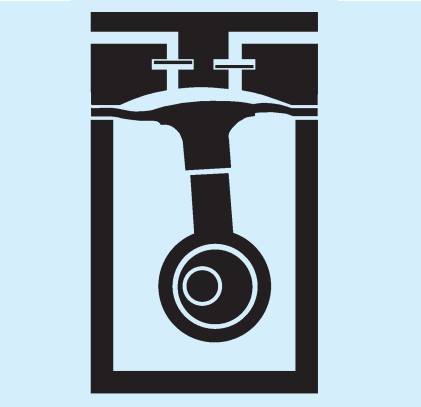

MODEL CODE FOR EASY ORDERING

The model code is identical to the order number. It is made up as follows, (sample):

N 830

KN

E or DC

230 V/50 Hz, IP 00 or 12 V

• Base model

• Head materials

• OEM Version with ac (E) or dc motor (DC)

• Other motor data eg.:

In addition the motor data must be given in the purchase order (voltage, frequency, and protection class). In our extensive program you are sure to find the pump you need for your particular application.

HINTS ON INSTALLATION AND OPERATION

- Range of use:
Transferring air and gases at temperatures between + 5 °C and + 40 °C
- Please check the compatibility of the materials of the pump head, diaphragm and valves with the medium.
- The KNF product line contains pumps suitable for pumping aggressive gases and vapors - please contact us.
- Permissible ambient temperature: between + 5 °C and + 40 °C
- The standard pumps are not suitable for use in areas where there is a risk of explosion. In these cases there are other products in the KNF program - please ask us for details
- The pumps are not designed to start against pressure or vacuum; when a pump is switched on the pressure in the suction and pressure lines must be atmospheric. Pumps that start against pressure or vacuum are available on request
- To prevent the maximum operating pressure being exceeded, restriction or regulation of the air flow should only be carried out in the suction line

- Components connected to the pump must be designed to withstand the pneumatic performance of the pump
- Install the pump so that the fan can draw in sufficient cooling air
- Fit the pump at the highest point in the system, so that condensate cannot collect in the head of the pump - that prolongs working-life.

TECHNICAL DETAILS

Motors with other voltages and frequencies on request.

HINTS ON SERVICE

The diaphragm and valve plates are the only parts of the KNF diaphragm pumps subject to wear. They are easy to change, as no special tools are needed.

If you have any questions, please call our application engineers (see below for contact telephone number).

ACCESSORIES		
Description	Details	Order No.
Filter/silencer	for NMP 830	024805

KNF Neuberger GmbH
Diaphragm Pumps + Systems
Alter Weg 3
D 79112 Freiburg
Tel. ++49 (0)7664/5909-0
Fax ++49 (0)7664/5909-99
www.knf.de
E-mail: info@knf.de

SALES CENTERS

Germany

KNF Neuberger GmbH
D-79112 Freiburg
Tel. +49 7664 5909 0
info@knf.de
www.knf.de

Benelux Netherlands

KNF Verder B.V.
NL-3451 GG Vleuten
Tel. +31 30 677 92 40
info@knf-verder.nl
www.knf-verder.nl

Benelux Belgium and Luxemburg

KNF Verder N.V.
B-2630 Aartselaar
Tel. +32 3 871 96 24
info@knf.be
www.knf.be

China

KNF Technology (Shanghai) Co., Ltd.
Shanghai 201203
Tel. +86 21 5109 9695
info@knf.com.cn
www.knf.com.cn

France, Morocco, Tunisia, Algeria

KNF Neuberger SAS
F-68128 Village-Neuf
Tel. +33 389 70 35 00
info@knf.fr
www.knf.fr

UK

KNF Neuberger U.K., Ltd.
Witney, Oxfordshire OX28 4FA
Tel. +44 1993 77 83 73
info@knf.co.uk
www.knf.co.uk

India

KNF Pumps + Systems (India) Pvt. Ltd.
Hinjewadi, Pune 411 057
Tel. +91 20 640 13 923
+91 20 640 08 923
info@knfpumps.in
www.knfpumps.in

Italy

KNF ITALIA S.r.l.
I-20063 Cernusco s. Naviglio MI
Tel. +39 02 272 03 860
info@knf.it
www.knf.it

Japan

KNF Japan Co.Ltd.
Tokyo 104-0033
Tel. +81 3 3551 7931
info@knf.co.jp
www.knf.co.jp

Korea

KNF Neuberger Ltd.
135-502, Seoul
Tel. +82 2 959 0255
knf@knfkorea.com
www.knfkorea.com

Sweden, Finland, Denmark, Norway

KNF Neuberger AB
SE-11743 Stockholm
Tel. +46 8 744 51 13
info@knf.se
www.knf.se

Switzerland

KNF Neuberger AG
CH-8362 Balzerswil
Tel. +41 71 973 99 30
knf@knf.ch
www.knf.ch

Taiwan

KNF Neuberger Ltd.
Taipei City, 11490
Tel. +886 2 2794 1011
knftwn@knftwn.com.tw
www.knftwn.com.tw

USA, Canada

KNF Neuberger, Inc.
Trenton, New Jersey 08691-1810
Tel. +1 609 890 8600
knfusa@knf.com
www.knfusa.com

Latin America

Tel. +1 609 649 1010
gb@knf.com
www.knf.com/es